


How to put up nursing table ROBUST

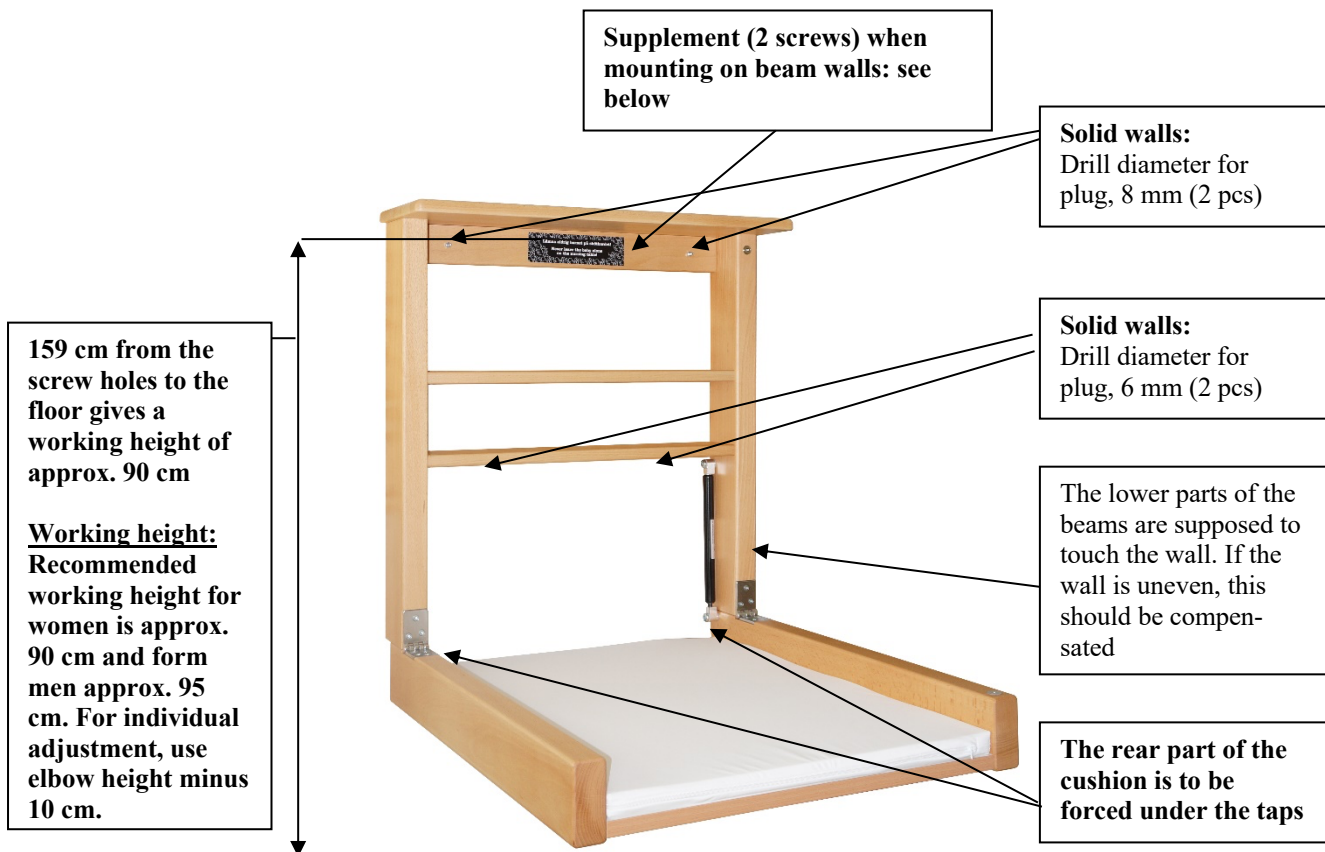

Mounting on solid walls: See above

Mounting on walls with drywall or similar: (Follow 1 and 2 below)

1. For the pre-drilled holes, use drywall anchor or similar. Expanding metal hollow wall anchor is recommended. Use 6 mm screws. (Those screws are not included)
2. Locate the beams behind the nursing table by knocking hard on the wall. Drill two more holes in the nursing table in front of the beams (see figure above). Then use the enclosed screws.

Control of the function of the nursing table:

When the nursing table is pushed up it should automatically lock.

Control of the wall mounting:

It is very important to carefully check the wall mounting! Load the nursing table with about 40 - 45 kg and ensure that there is no risk that the nursing table detaches from the wall.

Use and supervision:

Check regularly that the nursing table is properly attached to the wall and that all parts are in place and work correctly. The nursing table is not to be used if any part is broken or if any part has been dismantled. Spare parts can be bought from Skötbordspécialisten AB, Sweden, or other retailer of Robust.

How to take care of Robust:

The table is to be dusted or cleaned with a slightly damp cloth. If there are stains, use some type of mild cleaner or washing-up detergent. Do not use strong cleaners. The mattress cover can be machine washed. If the gas spring squeaks, try to loosen the lower screw that holds the gas spring.

Skötbordspécialisten AB, Gudmundsvägen 1, 237 41 Bjärred, Sweden
Tel. +46-46 29 46 42, E-mail: info@skotbord.com
www.nursingtable.com